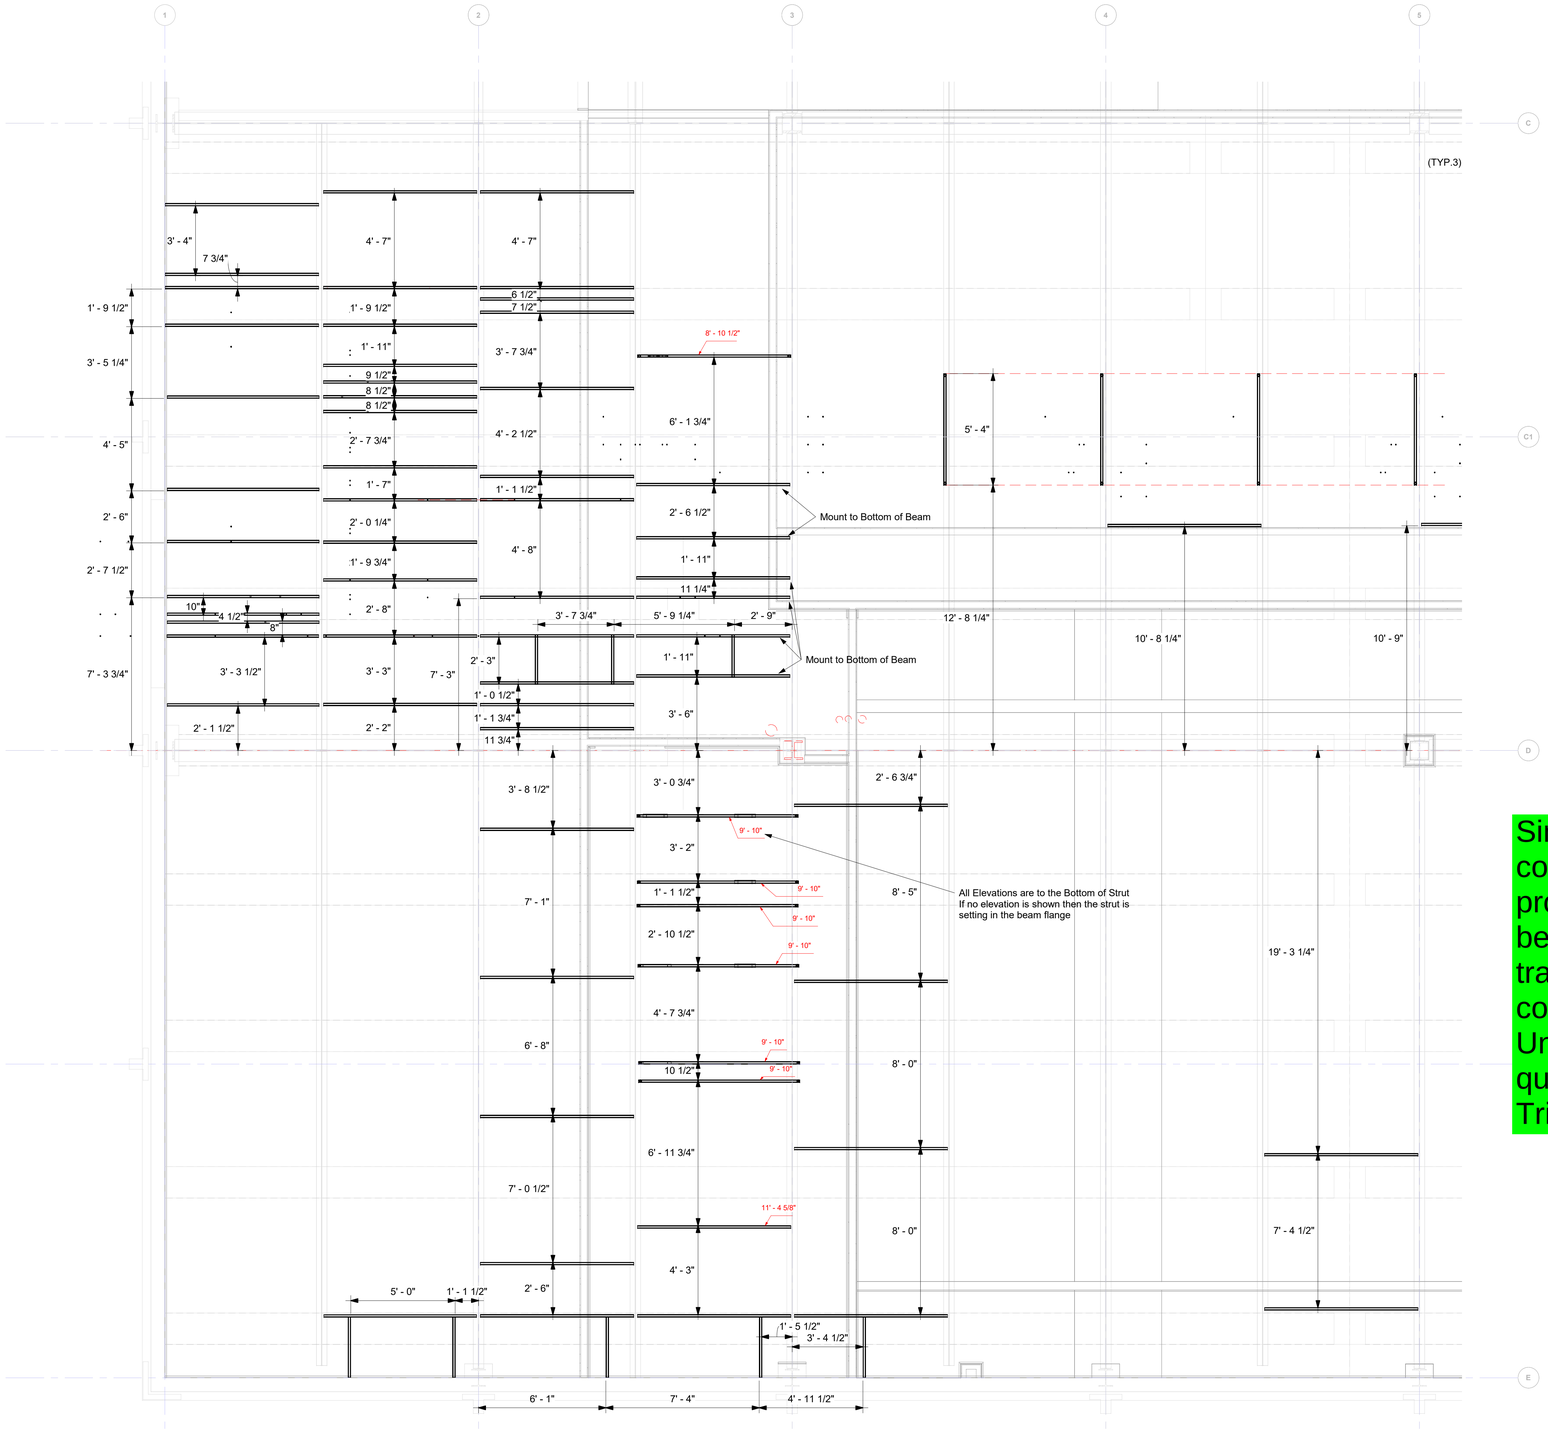

1 00 BASEMENT HANGERS AREA 1
3/8" = 1'-0"

Since all hanger locations are coordinated through the BIM process, hangers and supports can be installed before walls and other trades but hopefully all trades are coordinated together and all of the Uni-Strut can be installed very quickly. These locations can also be Trimble Pointed.

MP 100

BASEMENT HANGERS AREA 1

Scale 3/8" = 1'-0"

Project Number

Date 10-6-20

10/6/2020 4:28:55 PM